
### MAC addresses and ARP

- ❖ 32-bit IP address:
  - network-layer address for interface
  - used for layer 3 (network layer) forwarding
- MAC (or LAN or physical or Ethernet) address:
  - function: used 'locally' to get frame from one interface to another physically-connected interface (same network, in IPaddressing sense)
  - 48 bit MAC address (for most LANs) burned in NIC ROM, also sometimes software settable
  - e.g.: IA-2F-BB-76-09-AD

hexadecimal (base 16) notation (each "number" represents 4 bits)

### LAN addresses and ARP

### each adapter on LAN has unique LAN address

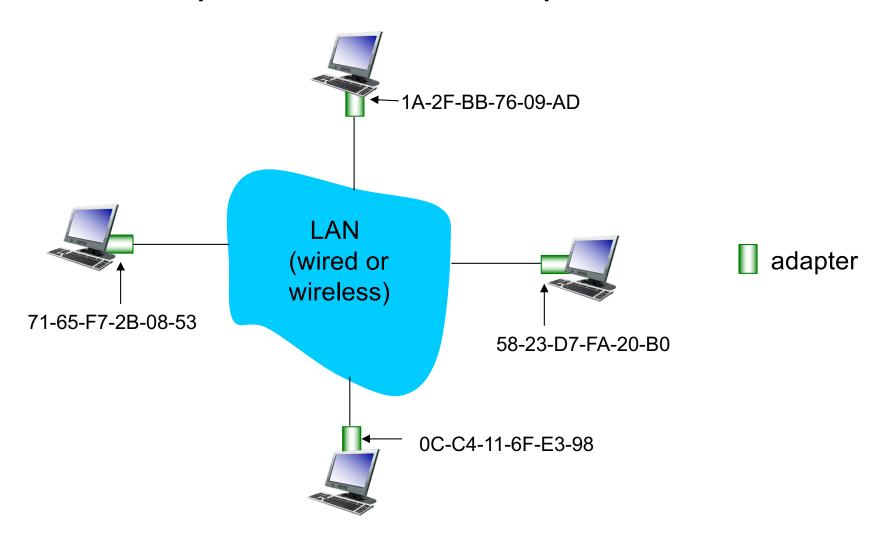


# LAN addresses (more)

- MAC address allocation administered by IEEE
- manufacturer buys portion of MAC address space (to assure uniqueness)
- analogy:
  - MAC address: like Social Security Number
  - IP address: like postal address
- ♦ MAC flat address → portability
  - can move LAN card from one LAN to another
- ❖ IP hierarchical address not portable
  - address depends on IP subnet to which node is attached

### ARP: address resolution protocol

Question: how to determine interface's MAC address, knowing its IP address?

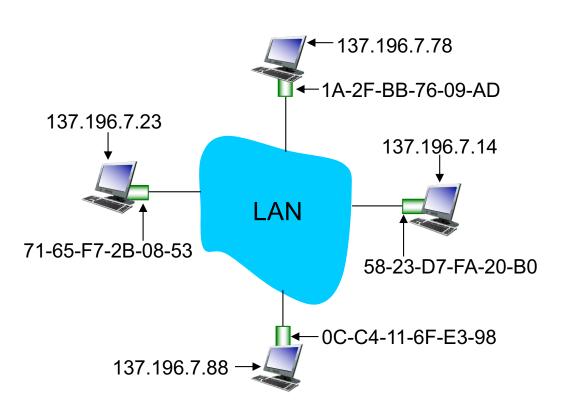

ARP table: each IP node (host, router) on LAN has table

IP/MAC address mappings for some LAN nodes:

< IP address; MAC address; TTL>

 TTL (Time To Live): time after which address mapping will be forgotten (typically 20 min)


## ARP protocol: same LAN

- A wants to send datagram to B
  - B's MAC address not in A's ARP table.
- A broadcasts ARP query packet, containing B's IP address
  - dest MAC address = FF-FF-FF-FF-FF
  - all nodes on LAN receive ARP query
- B receives ARP packet, replies to A with its (B's) MAC address
  - frame sent to A's MAC address (unicast)


- A caches (saves) IP-to-MAC address pair in its ARP table until information becomes old (times out)
  - soft state: information that times out (goes away) unless refreshed
- ARP is "plug-and-play":
  - nodes create their ARP tables without intervention from net administrator

#### walkthrough: send datagram from A to B via R


- focus on addressing at IP (datagram) and MAC layer (frame)
- assume A knows B's IP address
- assume A knows IP address of first hop router, R (how?)
- assume A knows R's MAC address (how?)

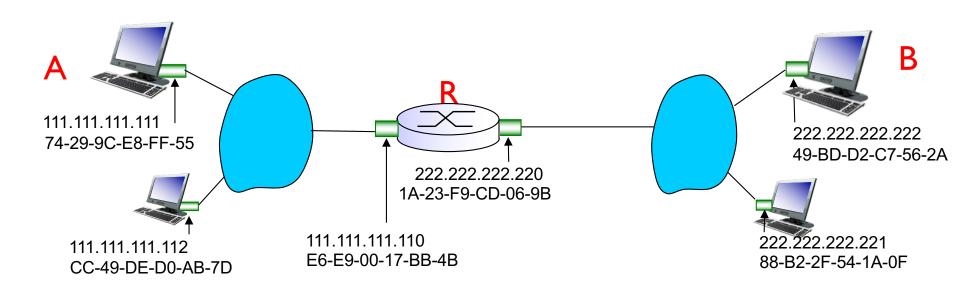


- A creates IP datagram with IP source A, destination B
- A creates link-layer frame with R's MAC address as dest, frame contains A-to-B IP datagram

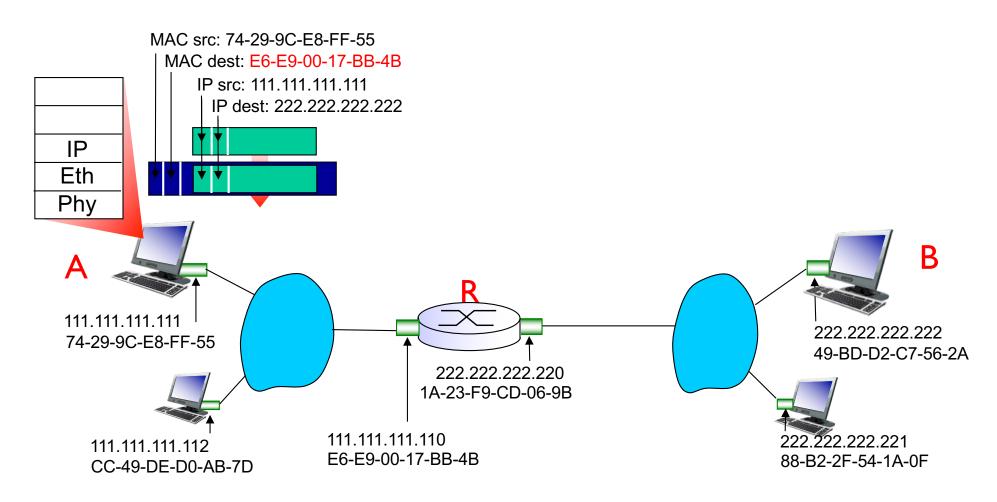


- frame sent from A to R
- frame received at R, datagram removed, passed up to IP

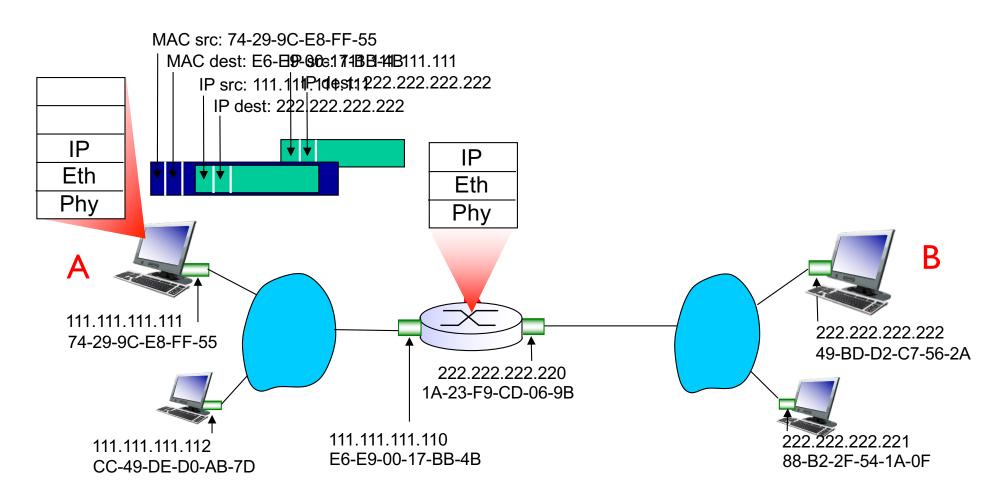

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

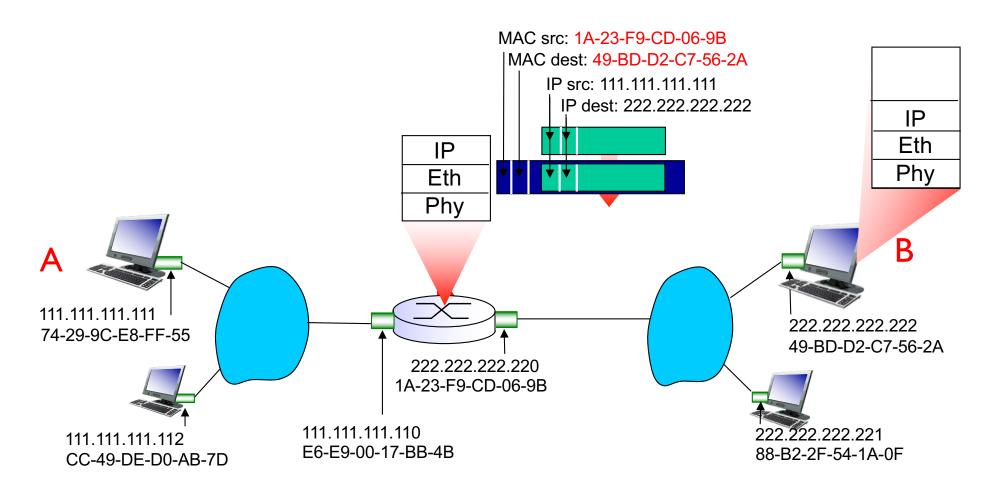

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

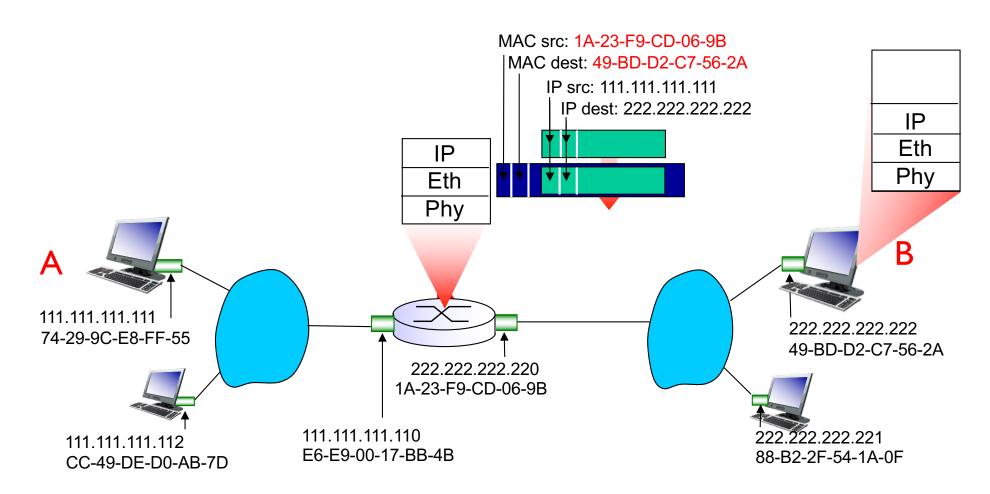

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

